


Below are instructions for performing **Single Point Calibration of CompX Temperature Monitoring eLock.**

**Single point calibration of the CompX temperature monitoring eLock can only be done in conjunction with LockView® v3.0 software.**

- 1 Place thermistor (green bottle) on its side at a known temperature value for 30 minutes;
- 2 Connect temperature monitoring eLock to LockView® v3.0;
- 3 Login to LockView® v3.0;
- 4 Click on **Read/Write Lock**, and under **Connection** tab **Connect To Lock**;
- 5 Click on **Window** in the upper left hand corner of the screen;
- 6 Click on **More Windows...**;
- 7 Enter **cal3** in the window code;
- 8 Click **OK**;

**NOTE:**

The system will display the calibration value that is currently in the connected eLock (as seen below) and allow it to be changed.

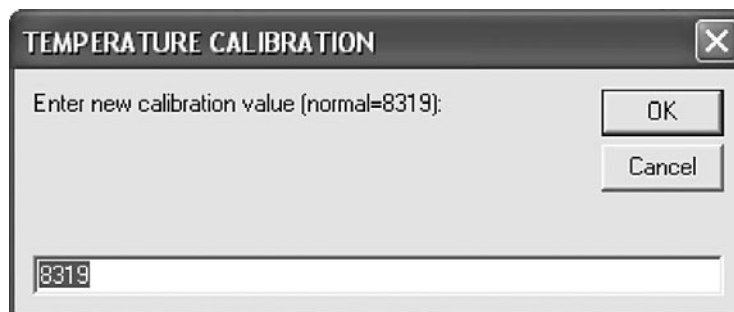

- 9 Adjust the calibration value;

**NOTE:**

A change of +/- 100 units will have an incremental affect of about 0.5°C (0.9°F) at 25°C (77°F).

- 10 Click **OK**;
- 11 Click on **Read/Write Lock** again, and under the **Connection** tab choose **Disconnect From Lock**;
- 12 Compare the temperature displayed on the eLock with the known temperature value;
- 13 Repeat steps 4 through 12 until the displayed eLock temperature and the known temperature value are the same.



**864.297.6655**

compixelock.com  
elock@compx.com

PO Box 200  
Mauldin, SC 29662